




# Grid Paralleling (Import/Export)

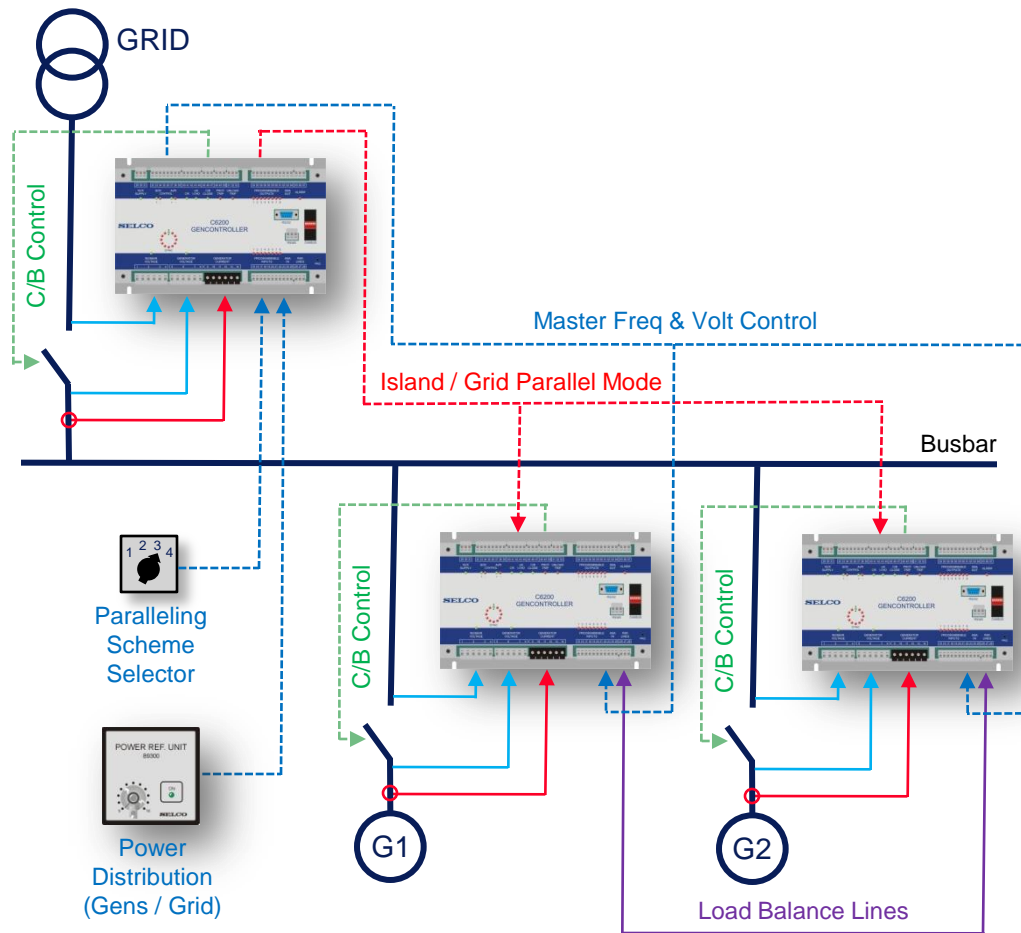


Fixed Import  
(from Grid)

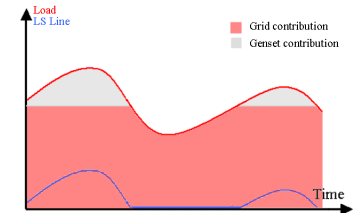


Peak Import  
(from Grid)

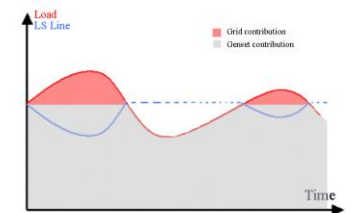

Fixed Export  
(from Gens)

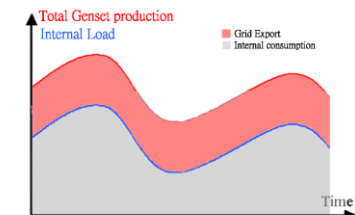

Excess Export  
(from Gens)

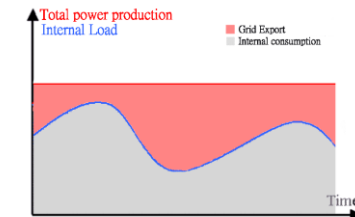


WRITE IMPORTEXPORT SCHEME [DISABLED, FIXEDIMPORT, PEAKIMPORT, FIXEDEXPORT, EXCESSEXPORT] (DISABLED)  
 WRITE IMPORTEXPORT VALUE [1 - 100] (25)  
 WRITE IMPORTEXPORT MODE [LS, PF] (LS)

# Tie breaker Auto-Sync using T4500



## Selector Switch Position

Top: Sync. B to A  
Middle: No Sync.  
Bottom: Sync. A to B

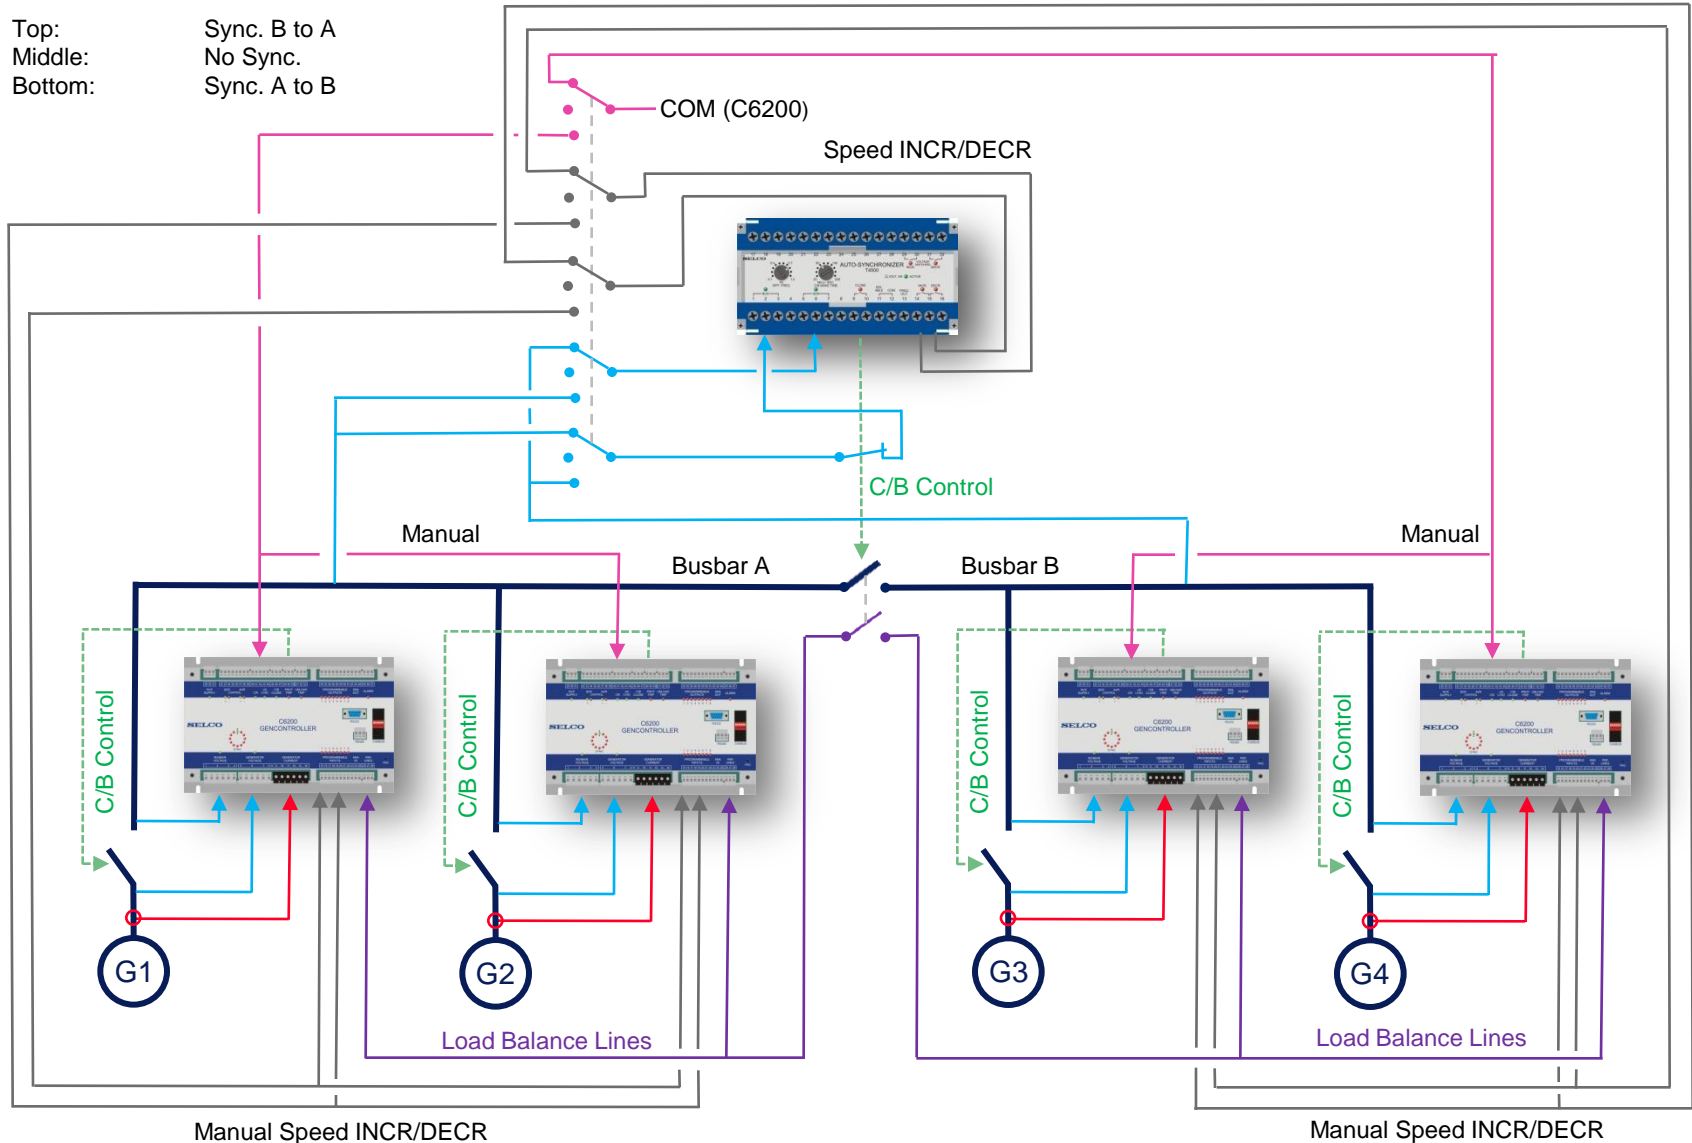

# Austal Application – 2 x 2 Gensets & Shore Connection

