

**S6500 UI Menu Structure**

System

- Load Calculation
  - Current (o)
  - Load ( )
- Set Pincode
  - 0000
- Setup Default
  - Yes ( )
  - No (o)
- Revision Info
  - YYMMDD

RS232

- Baud Rate
  - 1200 ( )
  - 2400 ( )
  - 4800 ( )
  - 9600 (o)
  - 19200 ( )
- Parity
  - None (o)
  - Even ( )
  - Odd ( )
- Data Bits
  - 7 ( )
  - 8 (o)
- StopBits
  - 1 (o)
  - 2 ( )